



24mm	$\varnothing 15$	$\varnothing 12$	8x35mm	8x50
103	102	104	601	602
31x	27x	4x	35x	20x




17x374	6,3x5,8x8	M4x9	3,5x35
810	245	209	219
4x	8x	4x	8x

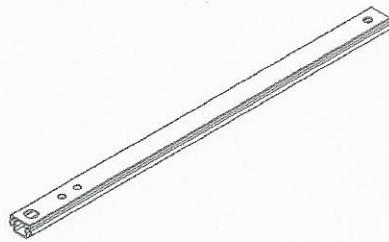

M6x $\varnothing 10 \times 13$	M6x80	SW 4	LIJM	5x40mm PZD
107	106	216	607	238
4x	4x	1x	1x	16x

1.


2x

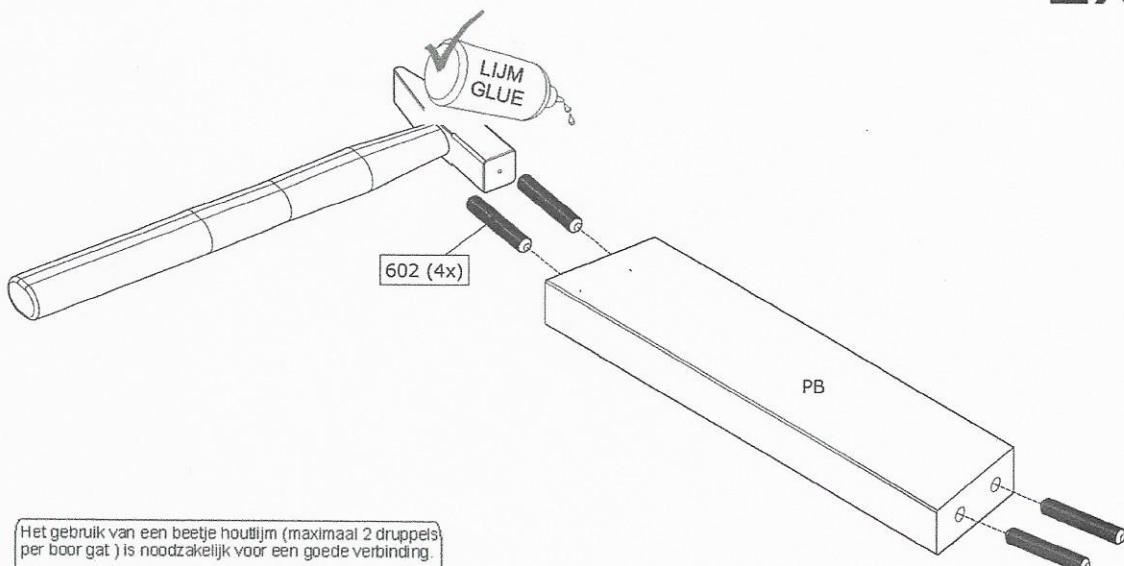

Het gebruik van een beetje houtlijm (maximaal 2 druppels per boor gat) is noodzakelijk voor een goede verbinding.
Verwendung von ein bisschen Holzleim (bis 2 tropfen pro Bohrloch) ist notwendig für eine gute Verbindung.
Il est nécessaire d'utiliser un peu de colle à bois (au maximum deux gouttes pour chaque trou de perceuse) pour assurer un bon assemblage.
The use of a little bit wood glue (up to 2 drops per drill hole) is necessary for proper connection


2.

2x

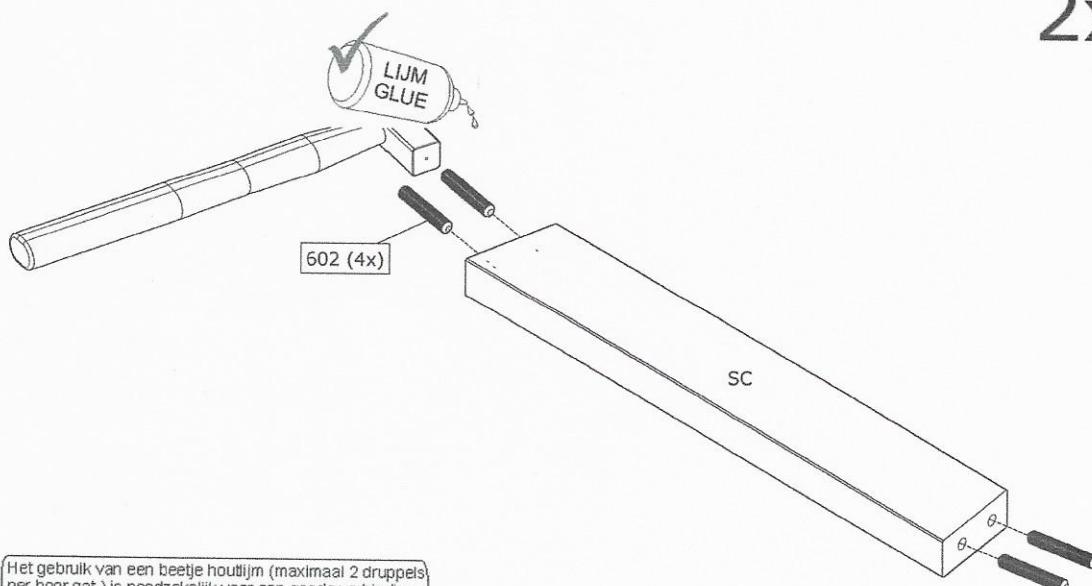


Het gebruik van een beetje houtlijm (maximaal 2 druppels per boor gat) is noodzakelijk voor een goede verbinding.
Verwendung von ein bisschen Holzleim (bis 2 tropfen pro Bohrloch) ist notwendig für eine gute Verbindung.
Il est nécessaire d'utiliser un peu de colle à bois (au maximum deux gouttes pour chaque trou de perceuse) pour assurer un bon assemblage.
The use of a little bit wood glue (up to 2 drops per drill hole) is necessary for proper connection

3.

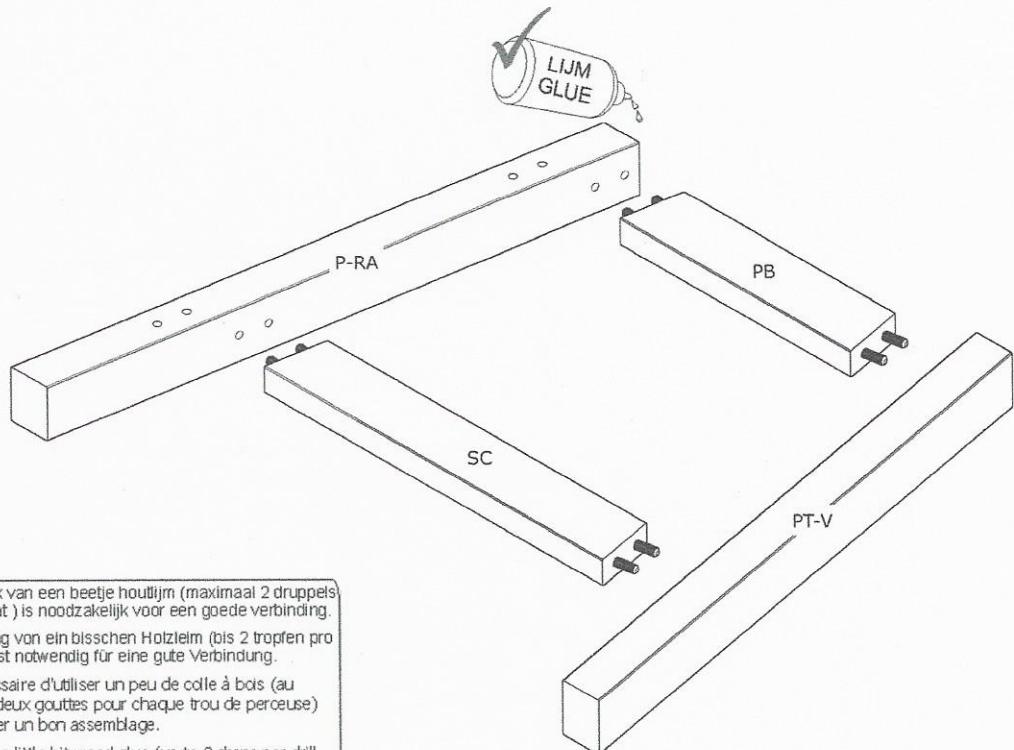


4.

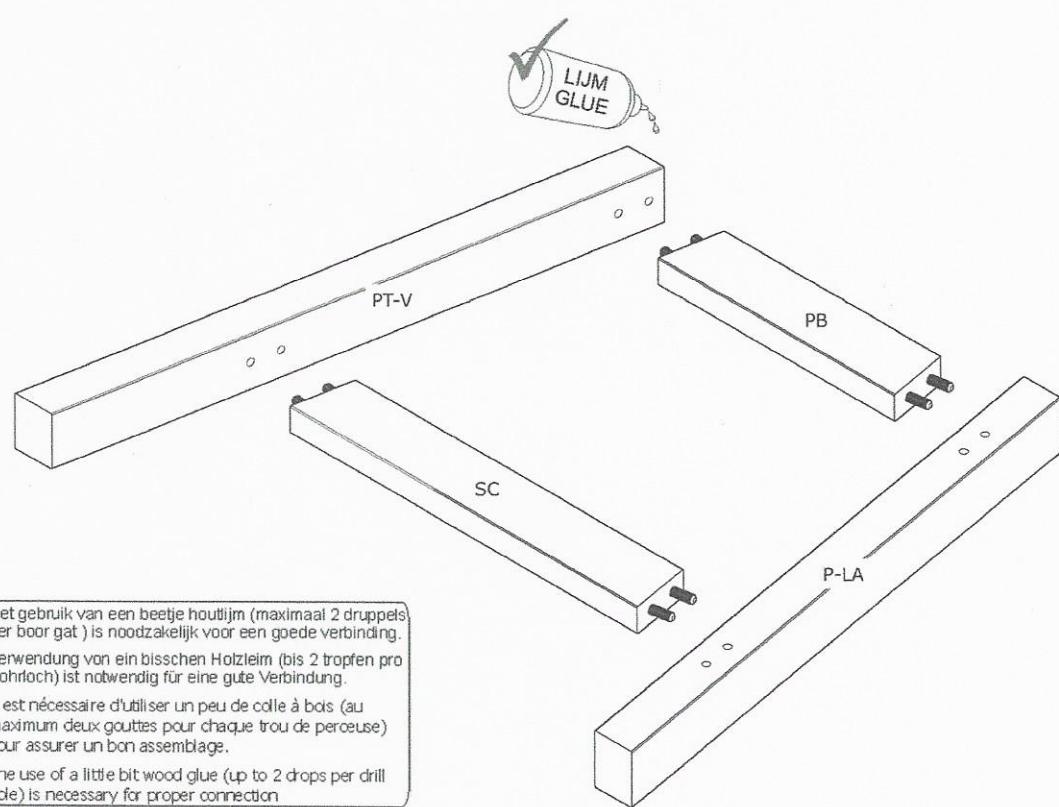


5.


2x

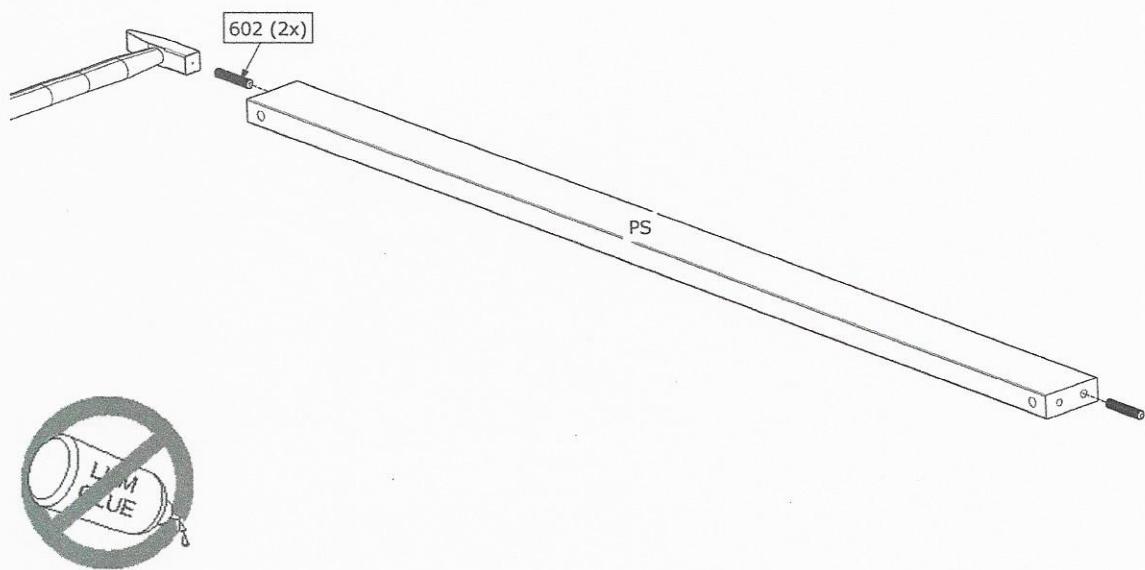


6.

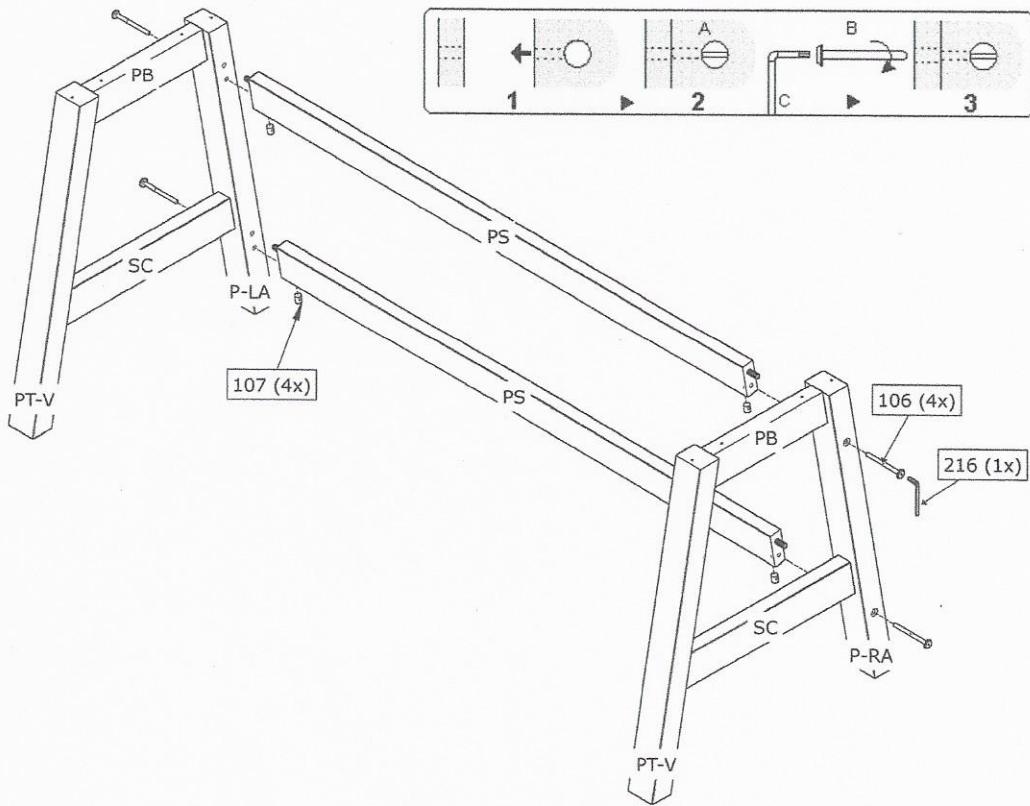


7.

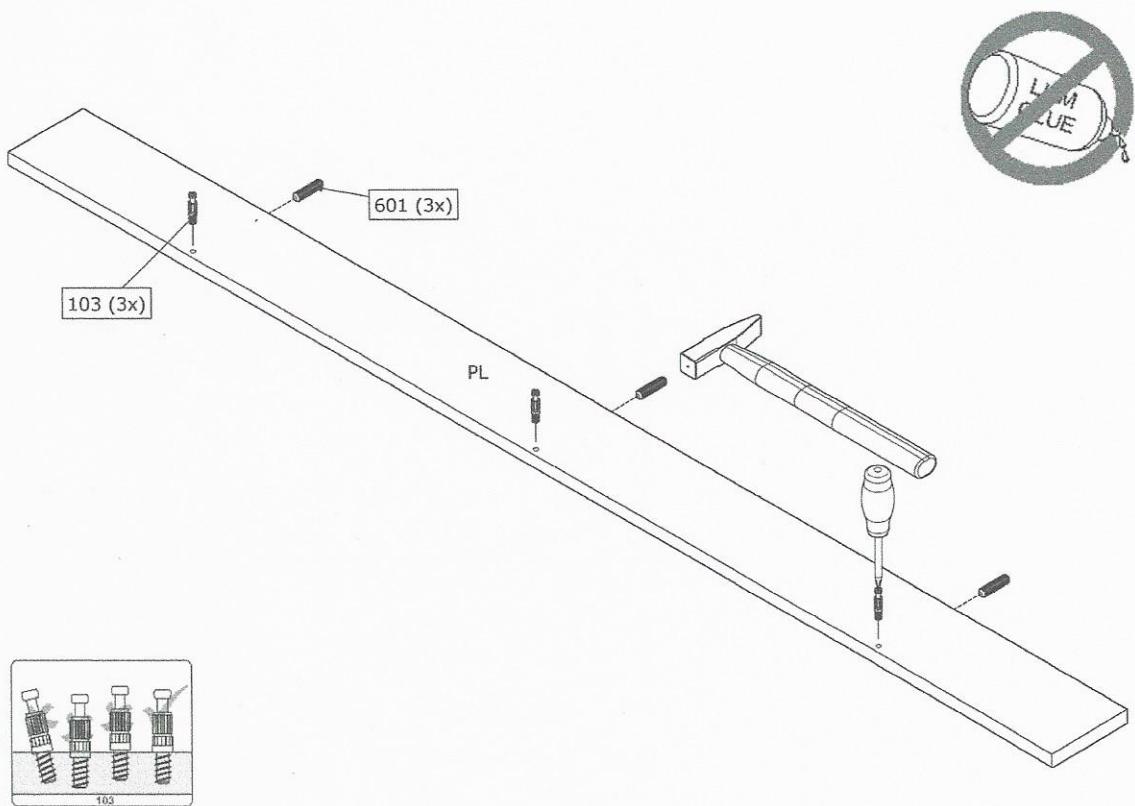


8.

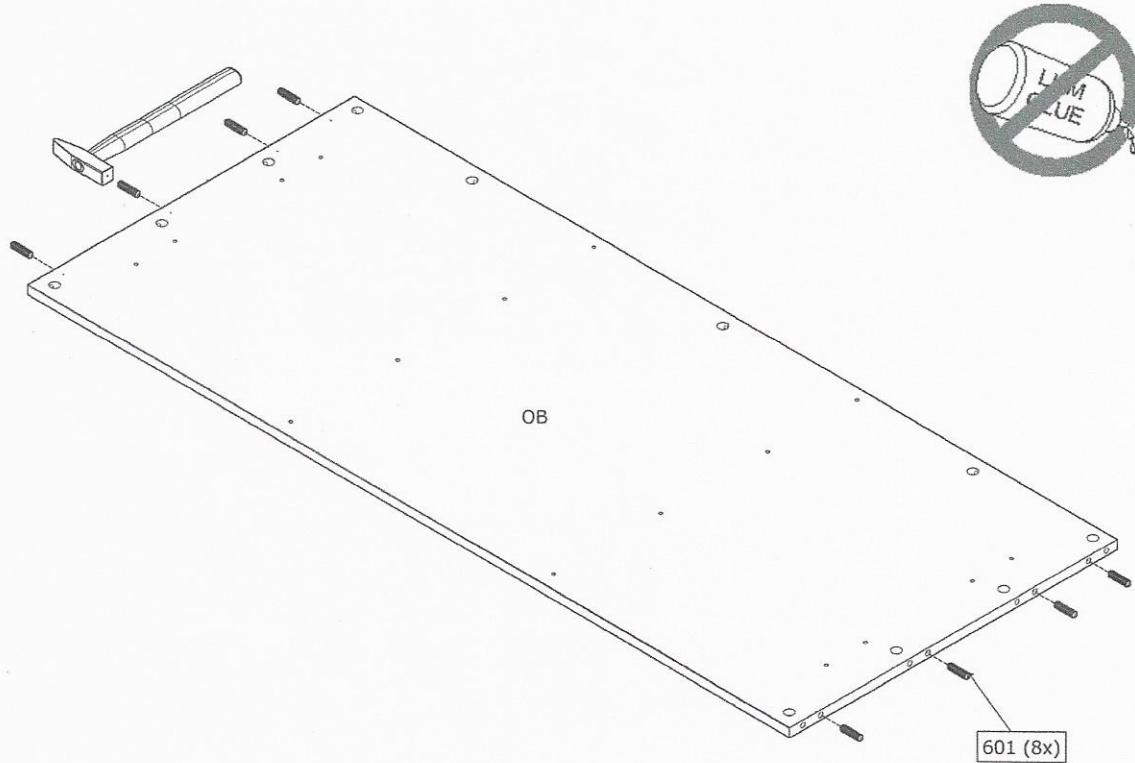


9.

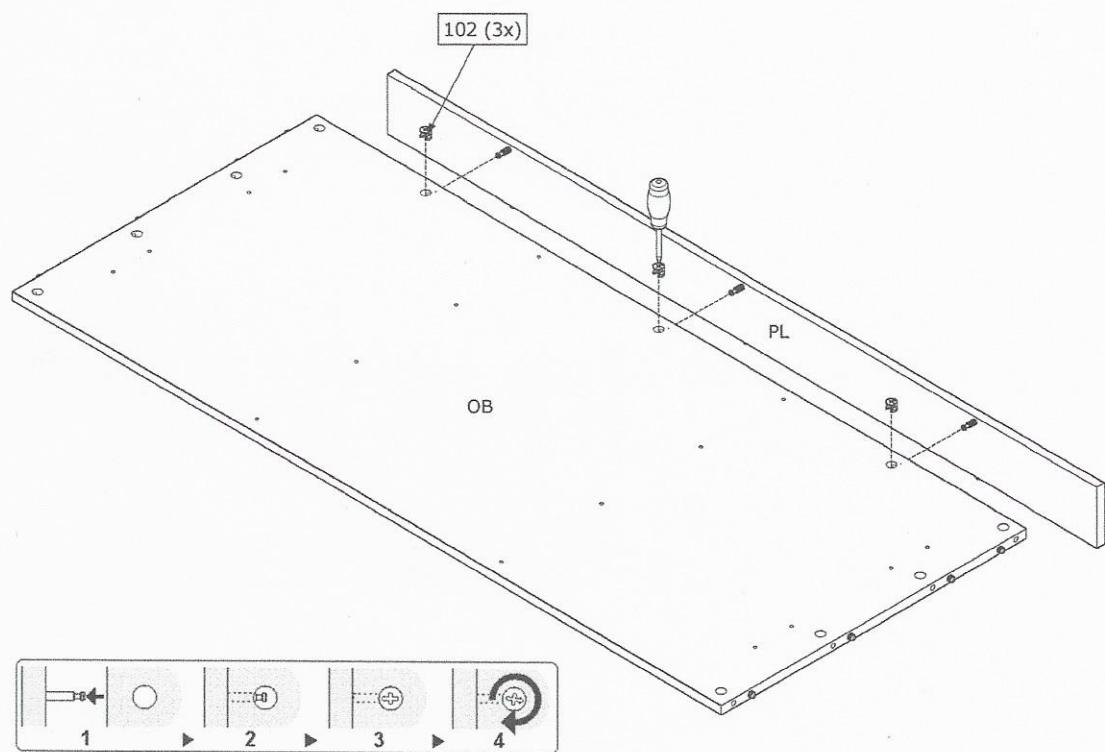


10.

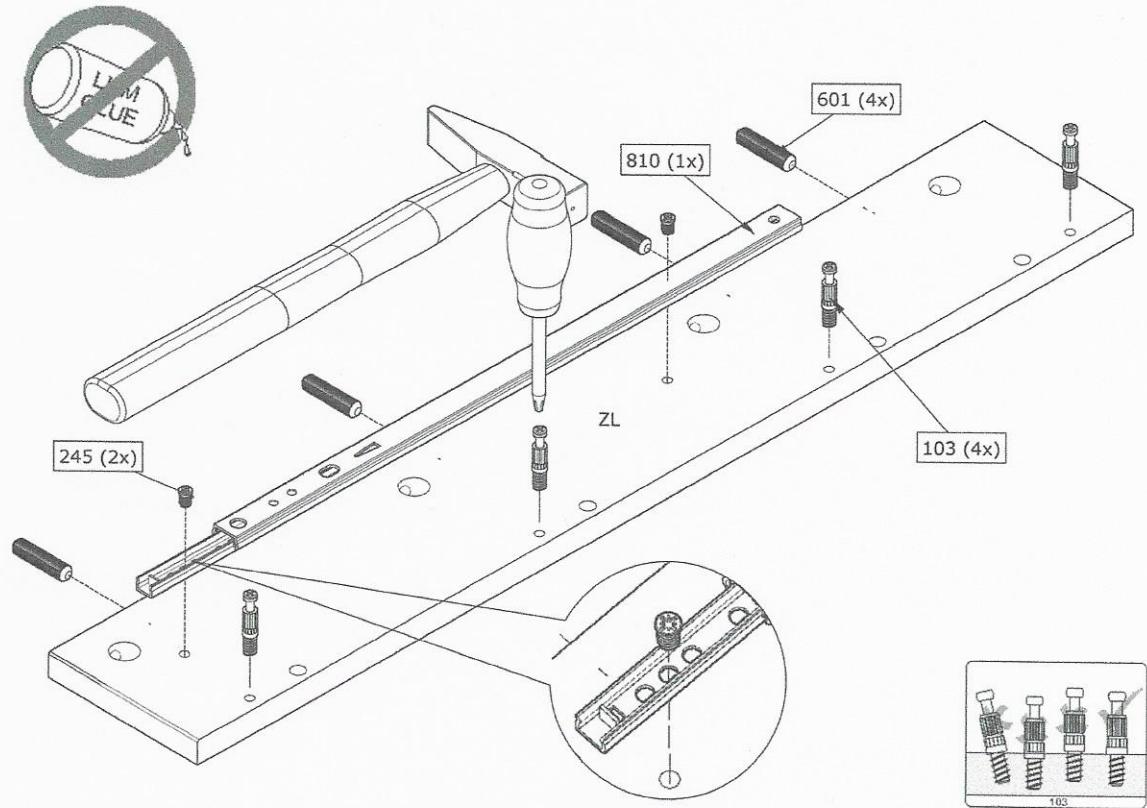


11.

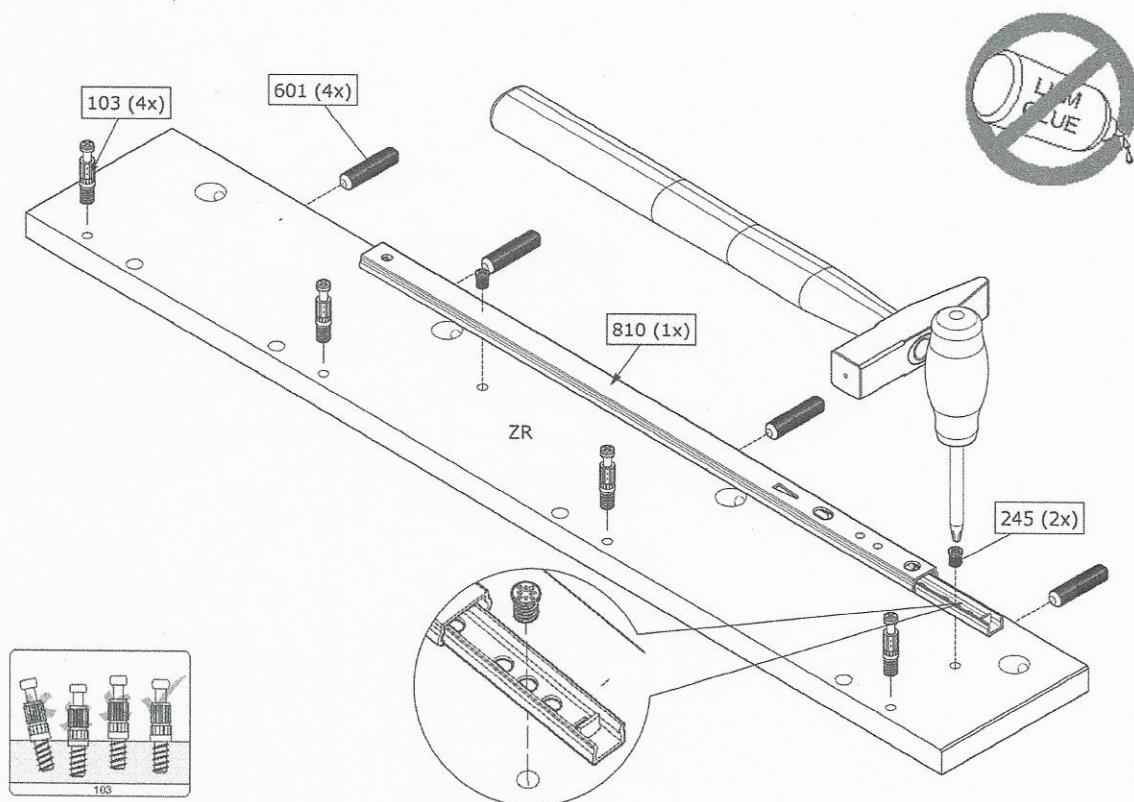


12.

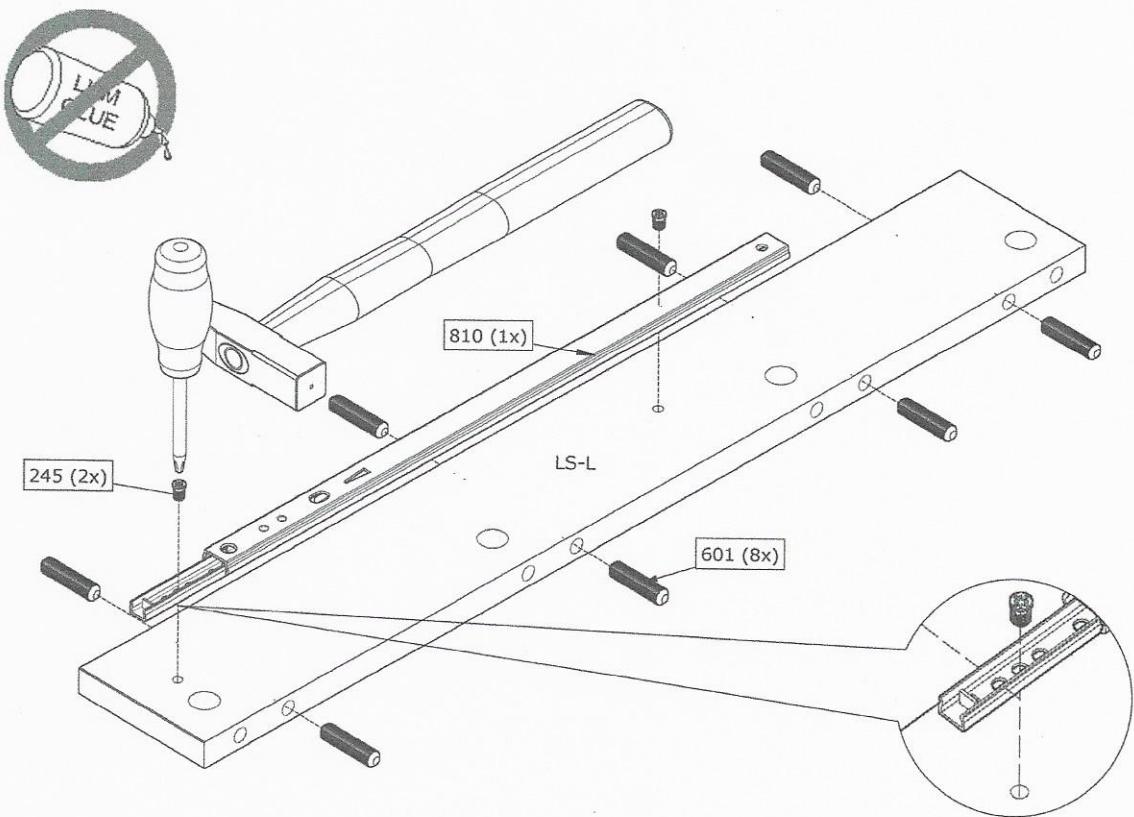


13.

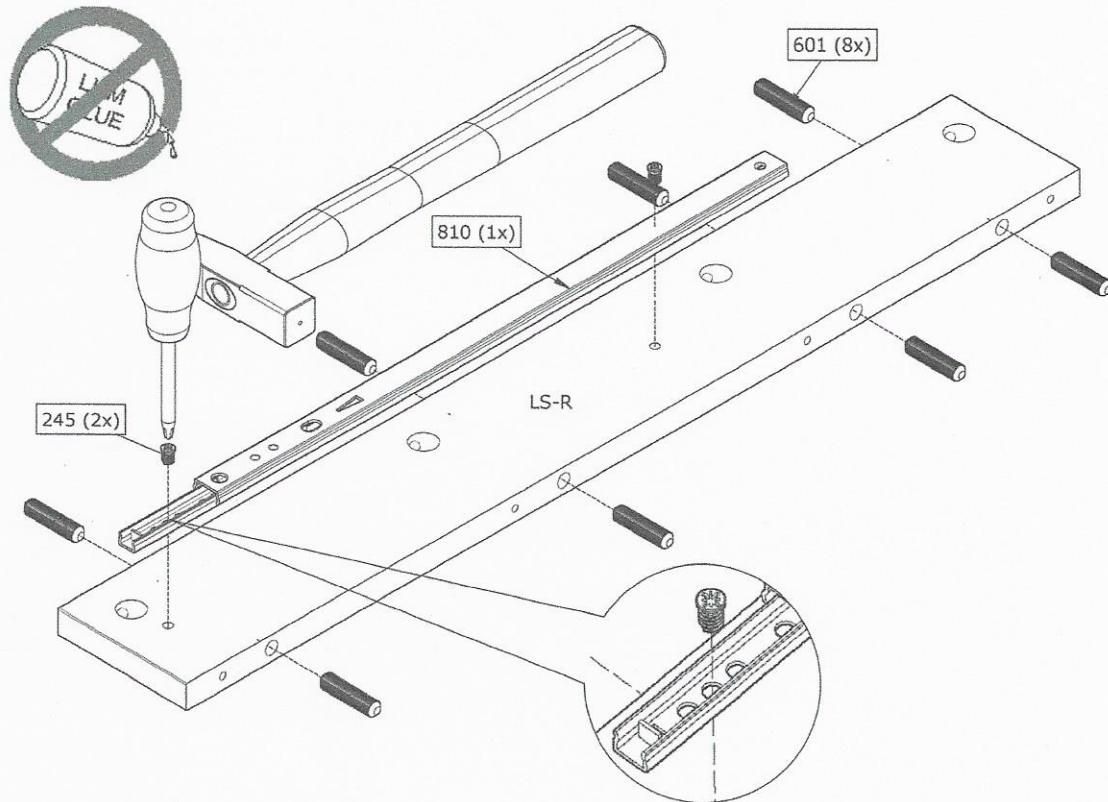


14.

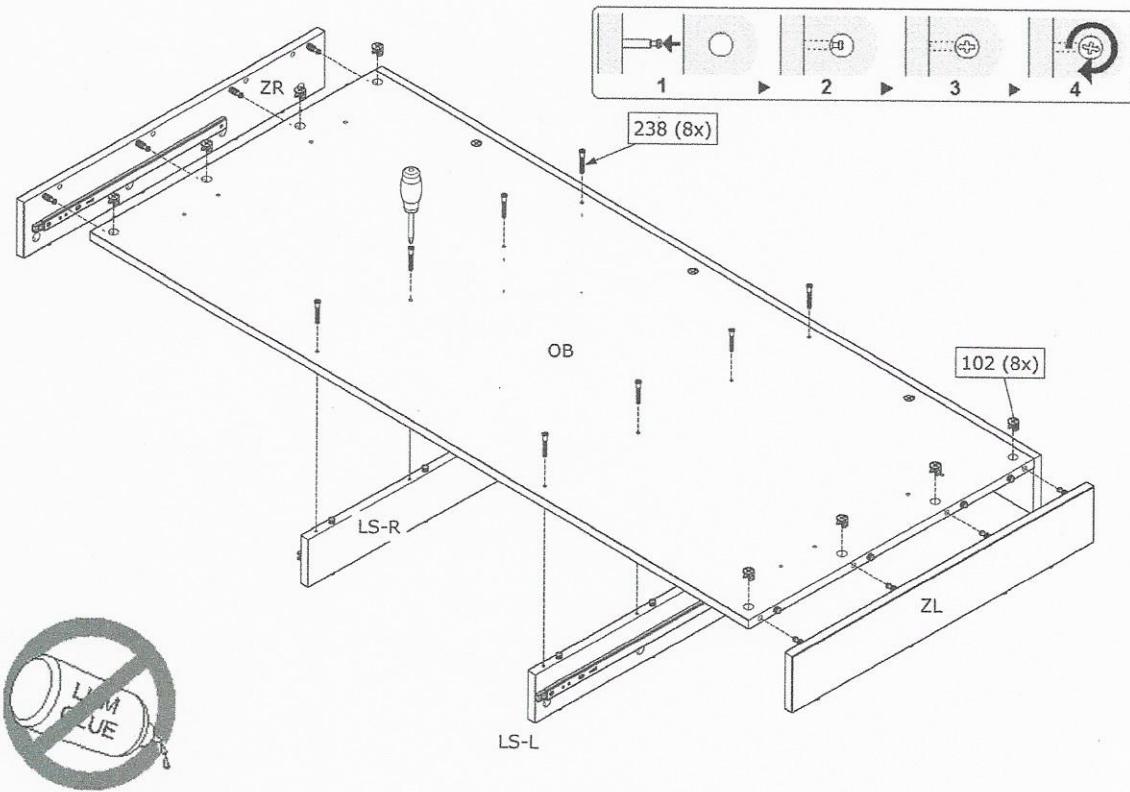


15.

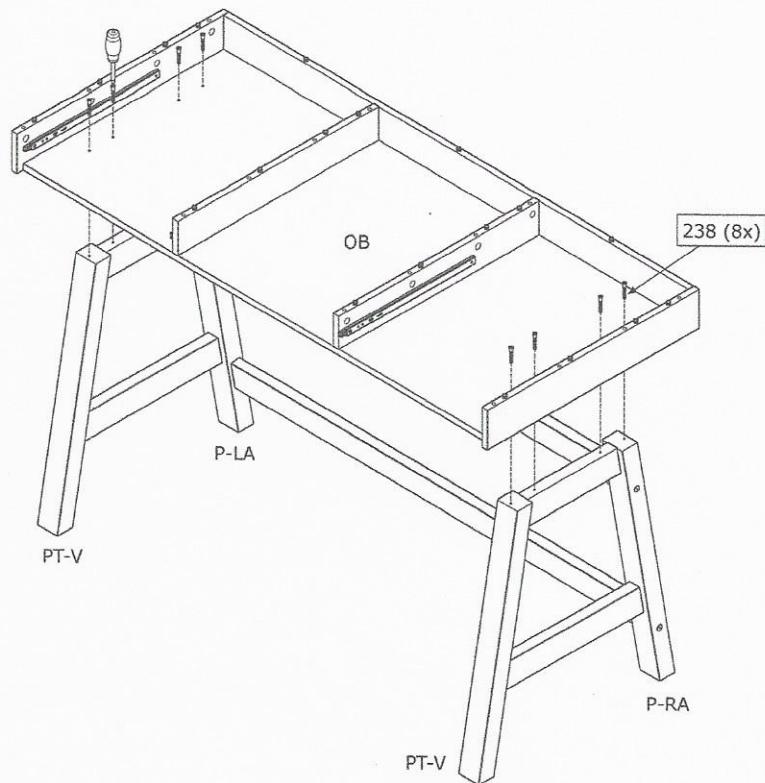


16.

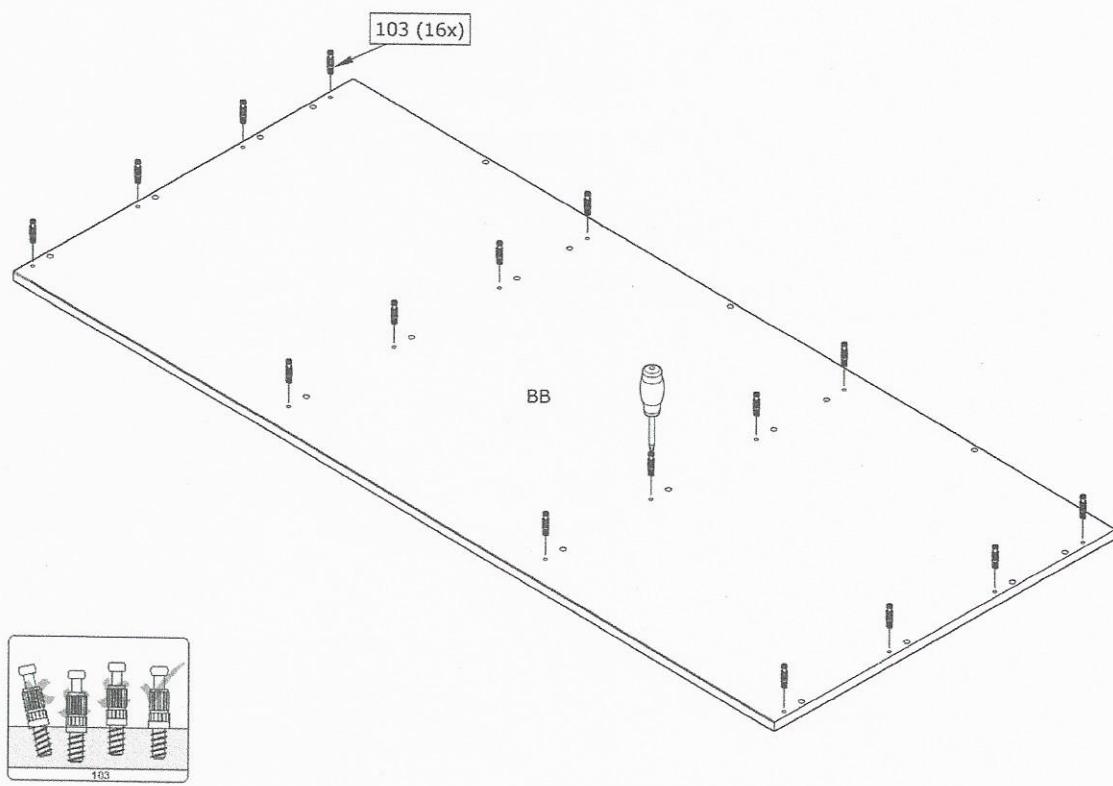


17.

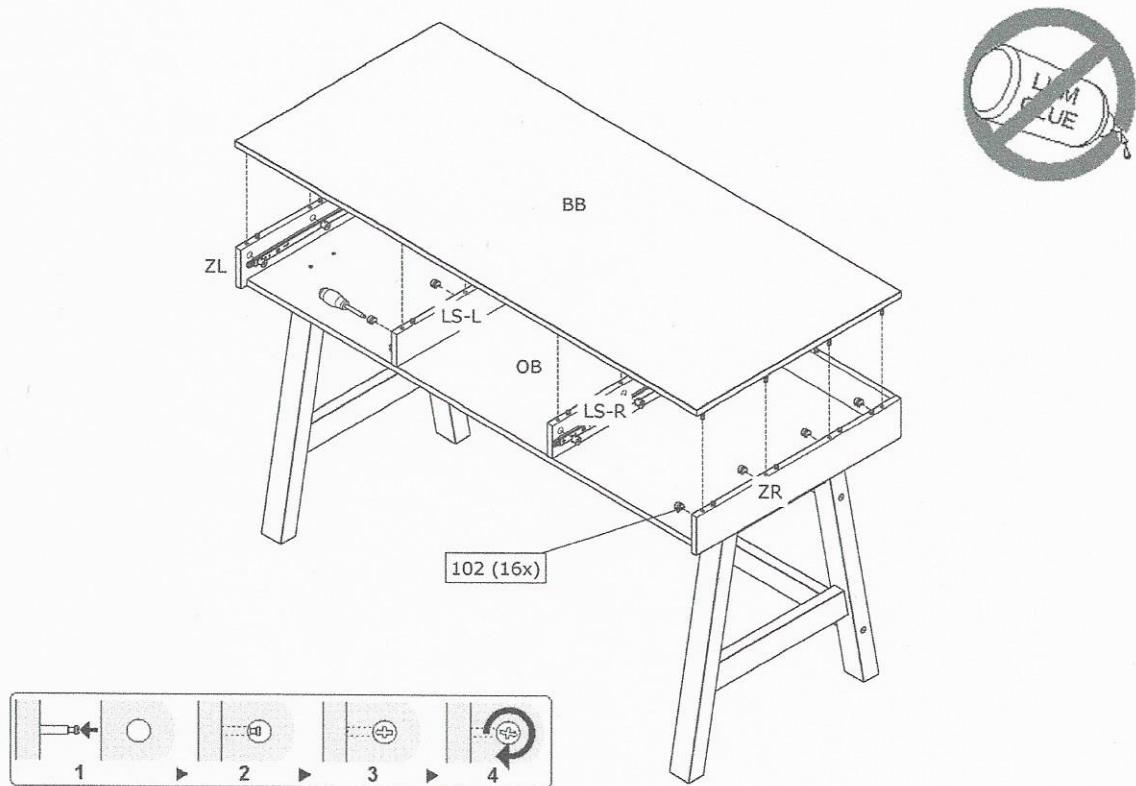


18.

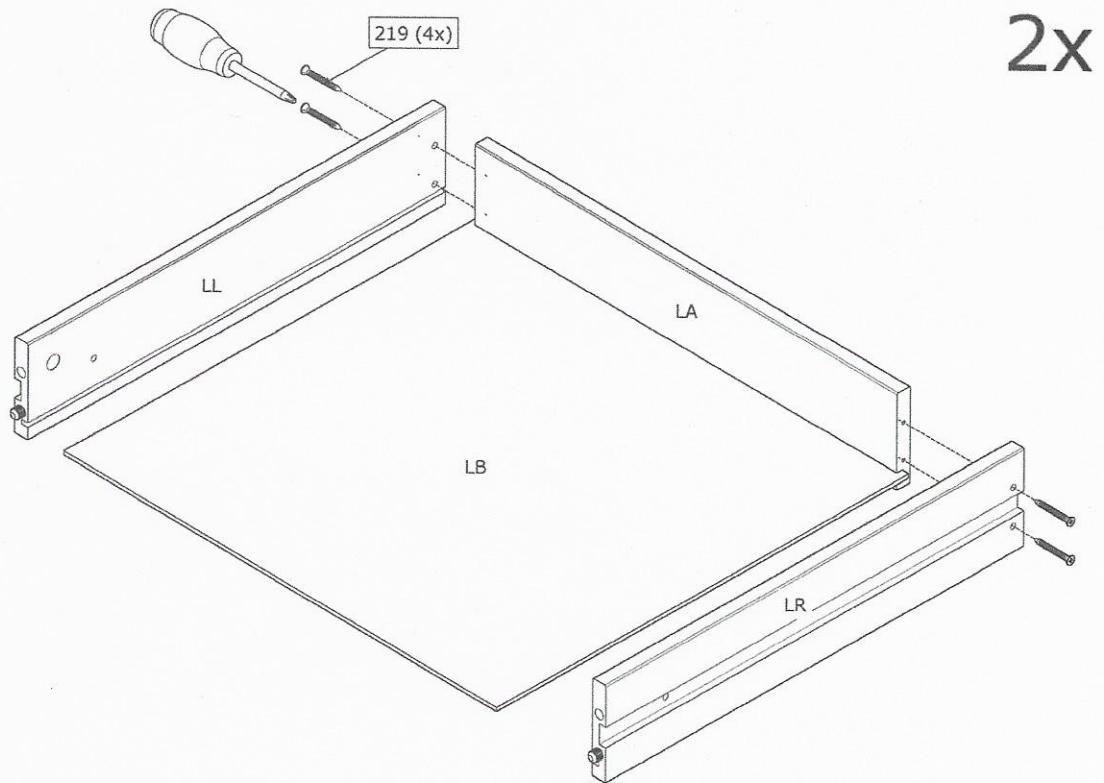


19.

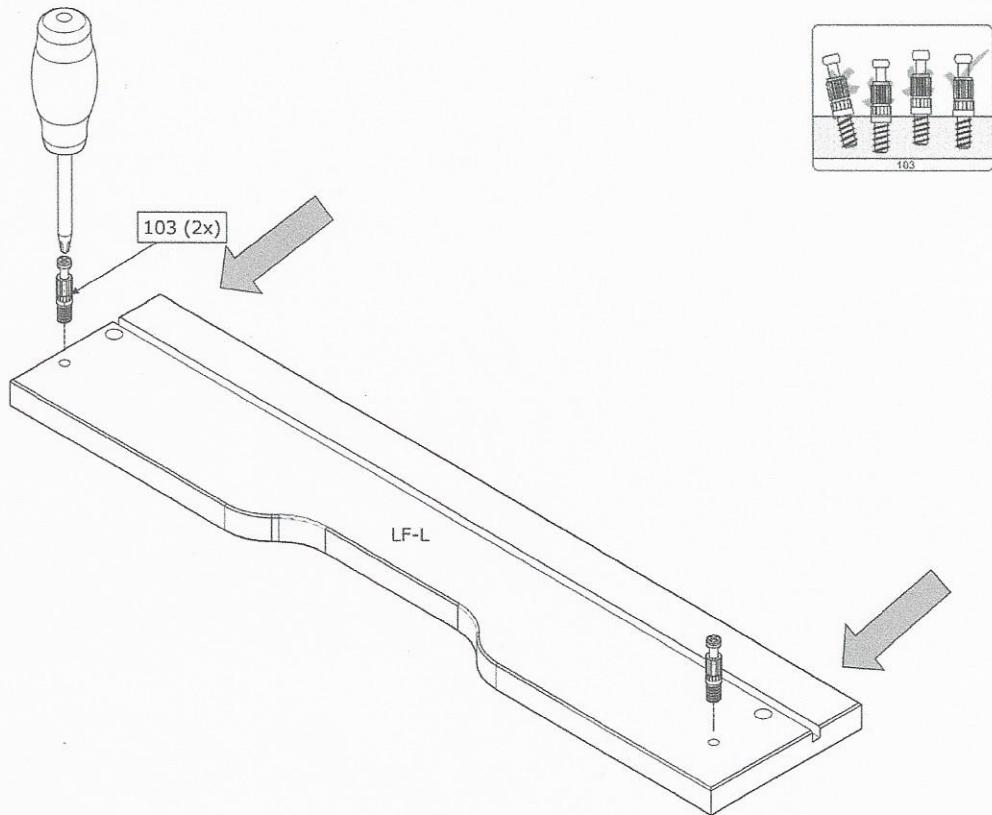


20.

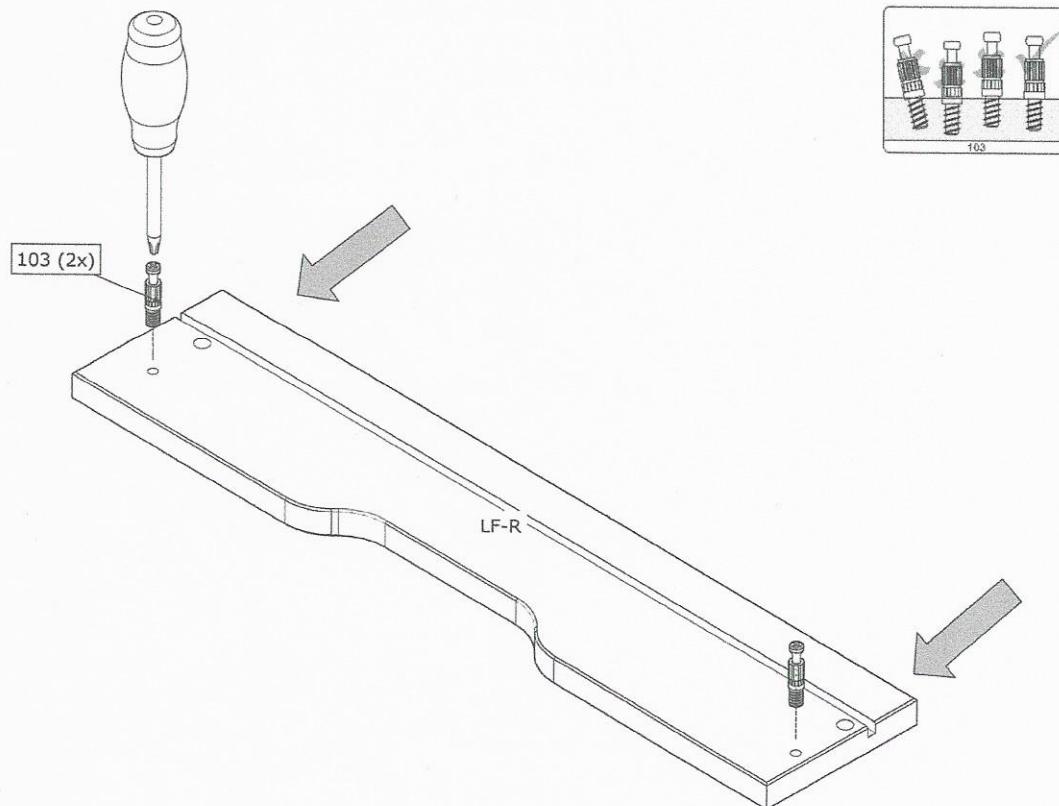

21.

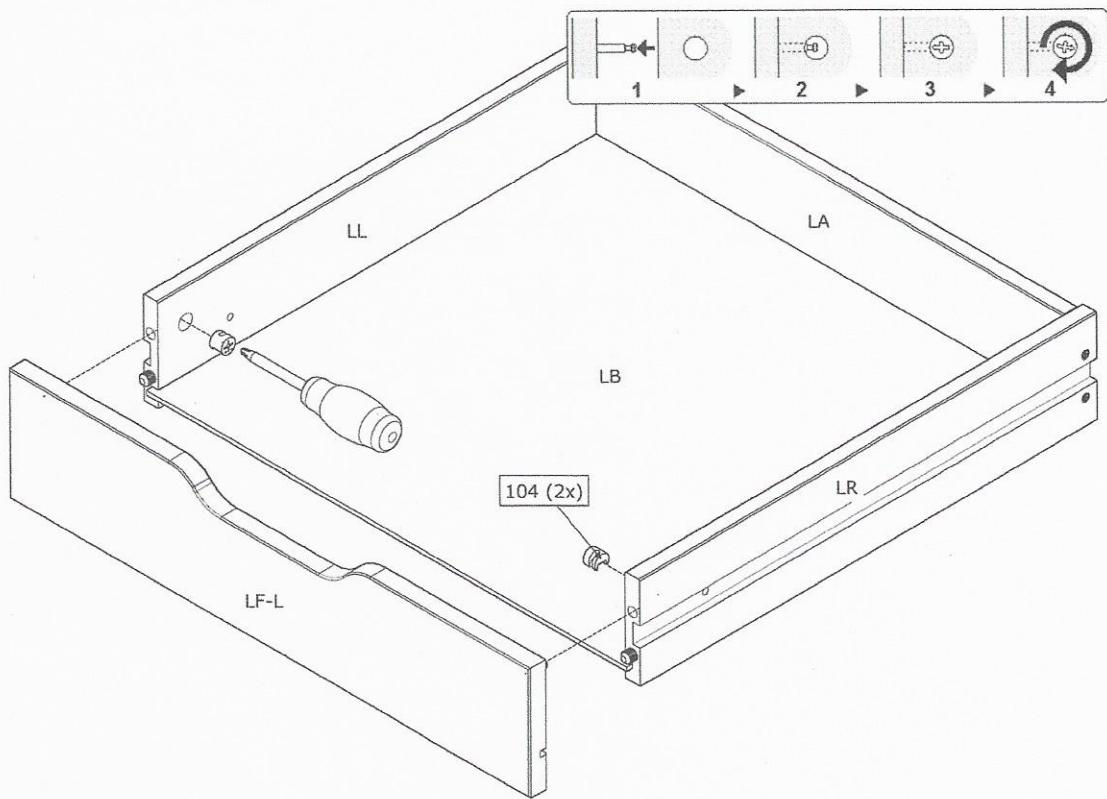

22.

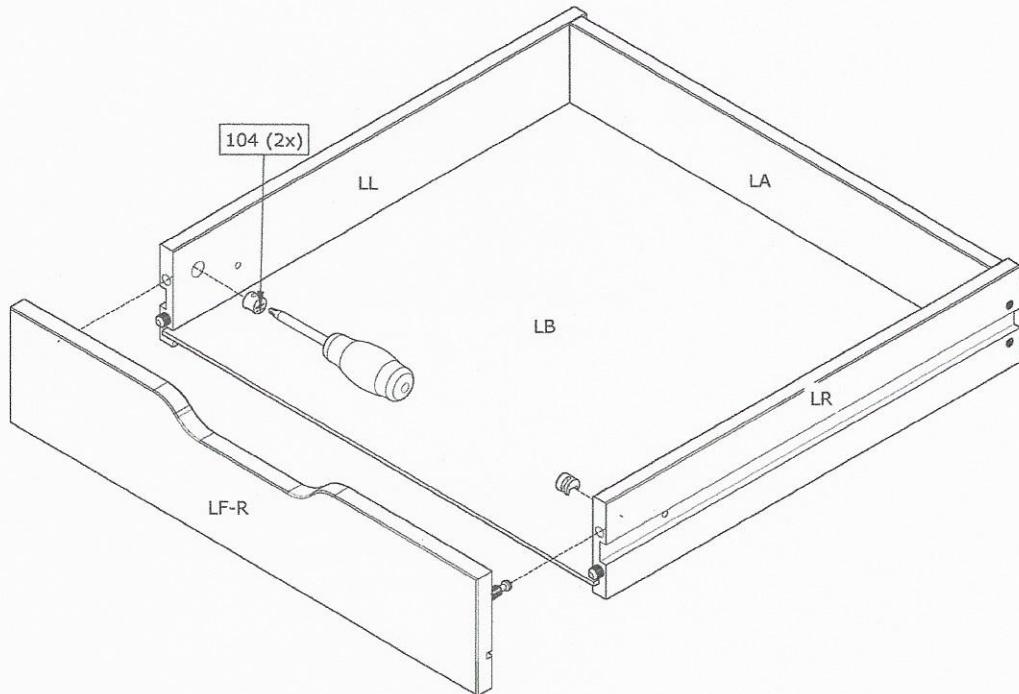

23.

